


# If a Fuse Blows


All of the electrical circuits on your ATV have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your ATV stops working, the first thing you should check for is a blown fuse (1).

Check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.

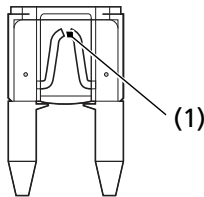

(1) blown fuse

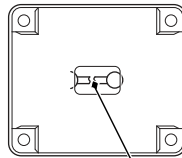

(1)

The main fuse and the circuit fuses are located under the rear fender cover.

## TRX500FM2 only:

The PS (Electric Power Steering) fuse is located under the rear fender cover.

## Recommended Fuses

main fuse 1	40 A
main fuse 2	10 A
other fuses	20 A × 4, 10 A
PS (Electric Power Steering) fuse (TRX500FM2 only)	40 A