

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY                         | WHICHEVER COMES FIRST<br>⇒ | INITIAL | REGULAR  |      | Refer to page |      |
|-------|-----------------------------------|----------------------------|---------|--|------|---------------|------|
|       |                                   |                            | MAINT.  | MAINT. INTERVAL  |      |               |      |
|       |                                   |                            | mi      | 100  | 600  |               | 1200 |
|       |                                   |                            | km      | 150  | 1000 |               | 2000 |
| MONTH | 1                                 | 6                          | 12      |  |      |               |      |
| NOTE  | HOURS                             | 20                         | 100     | 200  |      |               |      |
| *     | FUEL LINE                         |                            |         |  | I    | —             |      |
| *     | THROTTLE OPERATION                |                            |         |  | I    | 154           |      |
|       | AIR CLEANER                       | NOTE 1                     |         | C  | C    | 148           |      |
|       | AIR CLEANER HOUSING<br>DRAIN TUBE | NOTE 2                     |         | I  | I    | 153           |      |
|       | SPARK PLUG                        |                            |         | I  | I    | 158           |      |
| *     | VALVE CLEARANCE                   |                            |         | I  | I    | 161           |      |
|       | ENGINE OIL                        |                            |         | INITIAL=<br>100 mi (150 km), 20<br>operating hours or 1<br>month: R            |      | 127           |      |
|       | ENGINE OIL FILTER                 |                            |         | REGULAR=<br>Every 600 mi (1,000 km),<br>100 operating hours or 12<br>months: R |      | 132           |      |
| *     | ENGINE IDLE SPEED                 |                            |         | I  | I    | —             |      |
|       | RADIATOR COOLANT                  | NOTE 3                     |         | I  | I    | 140           |      |
| *     | COOLING SYSTEM                    | NOTE 2                     |         | I  | I    | —             |      |

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 242).