
## **Air Cleaner**

## **Dust Cover**

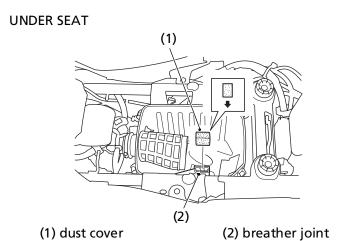

Do not push the dust cover (1) too far into the breather joint (2). If the dust cover is dirty, clean it.