

Operation Component Locations


rear brake lever/
parking brake lever

P/R lever

headlight switch

front brake lever

4WD switch

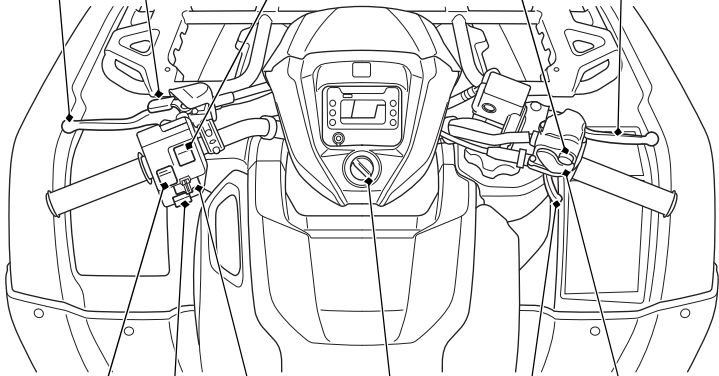

ignition switch

throttle lever

engine stop switch

differential lock
switch

start/override button

headlight dimmer switch