


# Indicators & Displays

## Maintenance Tripmeter/Maintenance Hour meter

The maintenance tripmeter (1) shows mileage to maintenance while the ignition switch is ON (I) with the maintenance minder indicator (2).

The maintenance hour meter (3) shows remaining time to maintenance while the ignition switch is ON (I) with the maintenance minder indicator.

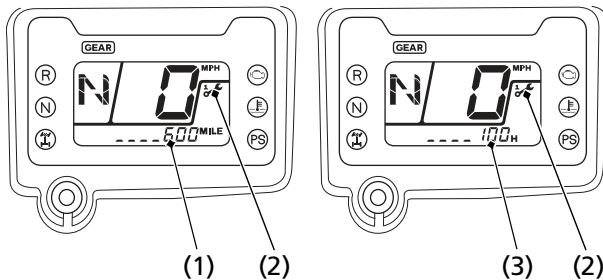

(1) maintenance tripmeter  
(2) maintenance minder  
indicator

(3) maintenance hour meter

The maintenance tripmeter decreases from 600 miles (1,000 km) after reset. The maintenance hour meter decreases from 100 hour after reset.

Initial setting of the maintenance tripmeter is 100 miles (150 km).  
Initial setting of the maintenance hour meter is 20 hour.

(cont'd)