


# Controls & Features

---

To activate the speed limiter override mode:

Push the start/override button (3) when the front differential lock mode is activated.

## LEFT HANDLEBAR

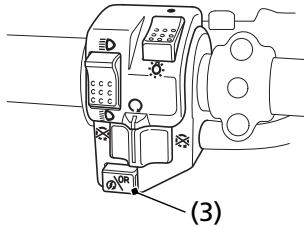


### (3) start/override button

Differential system failure:

The differential lock indicator and 4WD indicator (4) will both flash when there is any abnormality in the differential system. If this occurs, the differential actuator will stop moving, and the differential system will be fixed in the current position, either 2WD mode, 4WD mode or front differential lock mode.

If both the differential lock indicator and 4WD indicator flash, reduce speed and take your ATV to your dealer as soon as possible.

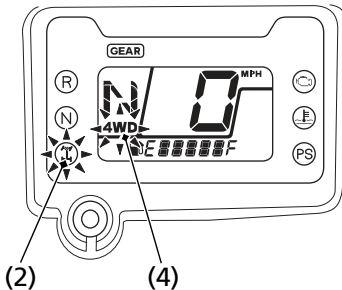

### (2) differential lock indicator

### (4) 4WD indicator