## **Indicators & Displays**

		,,
1	RESET button	Resets the tripmeter to zero (0)
		(page 22).
		This button also used to reset the oil
		change indicator (page 20).
2	Odometer/tripmeter	Selects display of the odometer or
	select button	tripmeter A or tripmeter B
		(page 21).
		This button also used to reset the oil
		change indicator (page 20).
3	4WD indicator	Lights when the drive mode is in the
		4WD mode. The 4WD indicator
		blinks if there is a possible problem
		with the 2WD/4WD select system.
		See your Honda dealer as soon as
		possible. Lamp Check.
4	High oil	Lights when engine oil temperature
	temperature	is high enough to adversely affect the
	indicator	service life of the engine.
		If the high oil temperature indicator
		comes on while you are riding,
		immediately bring the vehicle to a
		stop, turn the engine off and let it
		cool. See page 191. Lamp Check.
5	Neutral indicator	Lights when the transmission is in
		neutral. Lamp Check.
6	Reverse indicator	Lights when the transmission is in
		reverse. Lamp Check.