

# Indicators & Displays

---

## Lamp Check

Initial lamp check:

The indicators come on for a few seconds and then go off when you turn the ignition switch to ON (I).

### **TRX520FA6/FA7:**

The PS (Electric Power Steering) indicator comes back on and remains on until the engine is started after initial lamp check.

The high coolant temperature indicator and PGM-FI indicator comes back on for a few seconds and then go off after initial lamp check.

These indicators are identified in the table on page 17 with the words: *Lamp Check*.

When applicable, the reverse or neutral indicators come back on and remain on until you shift out of reverse or neutral after initial lamp check.

When applicable, the differential lock indicator comes back on and remains on until you shift out of the front differential lock mode after initial lamp check.

If one of these indicators does not come on when it should, have your dealer check for problems.