

Shifting Gears

You can temporarily shift up or down in AUTO (automatic shift mode) by using the shift switches.

The transmission cannot be upshifted from neutral to 1st gear or D-mode when the engine speed is above 2,200 rpm or the ground speed is above 3 mph (5 km/h).

The transmission cannot be downshifted from 1st gear or D-mode to neutral when the ground speed is above 3 mph (5 km/h) or engine speed is above 2,200 rpm.

In ESP (manual shift mode), if the ground speed decreases under a set speed (see table) the transmission will automatically downshift to the next lower gear.

Drive Range (D)		
Gear	Down Shift Speed	
	mph	km/h
5th	9	14
4th	6	10
3rd	4	8
2nd	2	3

Low Range (L)		
Gear	Down Shift Speed	
	mph	km/h
5th	6	10
4th	4	7
3rd	3	5
2nd	1	2

If the ATV is at a complete stop, 4th gear or 5th gear cannot be selected.

If the electric shift system malfunctions, the transmission cannot be shifted by pressing the gearshift switches. See your dealer. (In an emergency, a gear may be selected manually so you may move the vehicle. See *Emergency Gear Selection & Operation*, page 224).