


# If a Fuse Blows

---

- Pull the main fuse 2 (4) out with the fuse puller on the underside of the rear fender cover (page 131).  
If the main fuse 2 is blown, install the spare fuse (6).
- Install the fuse cover.

## Circuit Fuses Access

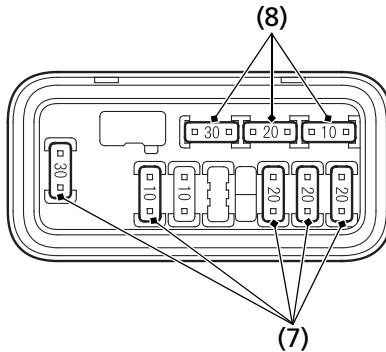

(7) circuit fuses

(8) spare fuses

- To check or replace a circuit fuse (7), pull the old fuse out of its retaining clips with fuse puller on the underside of the rear fender cover (page 131).  
If the fuse is blown, replace it with a spare fuse (8) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

- Install the fuse box cover.
- Install the rear fender cover.
- Install the seat.

## 234 Taking Care of the Unexpected