

GPS Mode


There are two methods for marking waypoints.

- Basic (to select your current position)
- Advanced (to input desired destinations)

Basic Waypoint Selection

To Mark Your Present Position:

1. Turn the ignition switch ON (I).
2. Use the GPS/WP button (1) to select the GPS mode.
3. To select a higher waypoint number (2), press and release the plus button (3).
To select a lower waypoint number, press and release the minus button (4).
To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.
4. Press and hold the GPS/WP button (1) for about 2 seconds, until the waypoint number and distance to waypoint (5) flash. Then release the button.

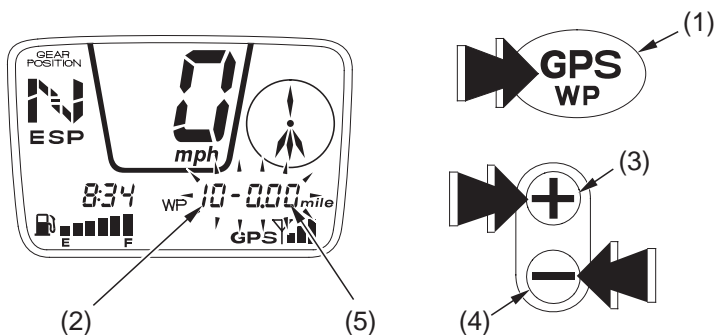

- | | |
|---------------------|--------------------------|
| (1) GPS/WP button | (4) minus button |
| (2) waypoint number | (5) distance to waypoint |
| (3) plus button | |

(cont'd)