


# Spark Plug

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 99 .

1. Remove the seat (page 110).
2. Loosen the screw ( 1 ) and remove the resonance chamber ( 2 ).
3. Unhook the rubber cover ( 3 ).
4. Clean any dirt from around the spark plug base.
5. Disconnect the spark plug cap ( 4 ). Take care to avoid damaging the spark plug wire when disconnecting the cap.
6. Using a spark plug wrench provided in the tool kit, remove the spark plug.
7. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.

### UNDER SEAT

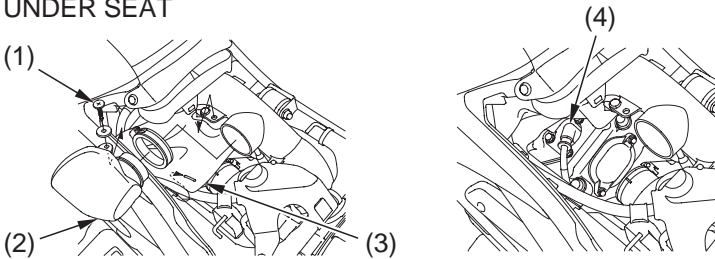

(1) screw  
(2) resonance chamber

(3) rubber cover  
(4) spark plug cap

8. Make sure that a 1.2 mm wire-type feeler gauge cannot be inserted between the spark plug gap ( 5 ). If the gauge fits in the gap, replace the plug with a new one.

(cont'd)