- 1. Pull the breather tube (2) out of the handlebar cover hole (3).
- 2. To open the fuel fill cap (1), turn it counterclockwise.
- 3. Add fuel until the level reaches the bottom of the filler neck (4). Avoid over filling the tank. There should be no fuel in the filler neck.

## 3 WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.
- 4. After refueling, turn the fuel fill cap clockwise until it clicks.
- 5. Insert the breather tube into the handlebar cover hole.

If you replace the fuel fill cap, use only a Honda Genuine replacement part.