


# If a Fuse Blows

---

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (w) before checking or replacing the fuses.
2. Remove the seat ([page 110](#)).
3. To access the main fuse (2) (3), remove the fuse box cover (4).

## UNDER SEAT

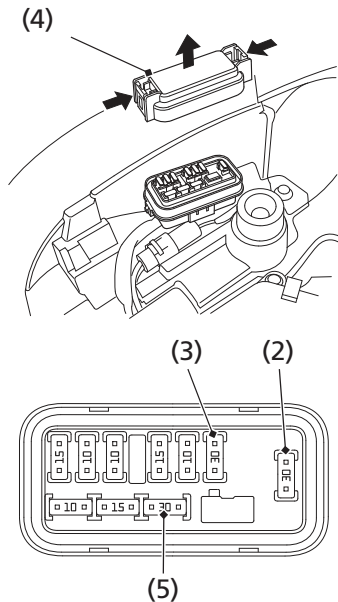

- (2) main fuse 1
- (3) main fuse 2

- (4) fuse box cover
- (5) spare main fuse

4. Pull the main fuse out.  
If it is blown, install the spare main fuse (5).