


# Indicators & Displays

---

## Drive Mode Indicator

The drive mode indicator (1) shows the selected drive mode when the ignition switch is in the ON (q) position.

The drive mode indicator (1) displays ESP when the manual shift (ESP) mode is selected. The ESP display vanishes when the automatic shift (AUTO) mode is selected.

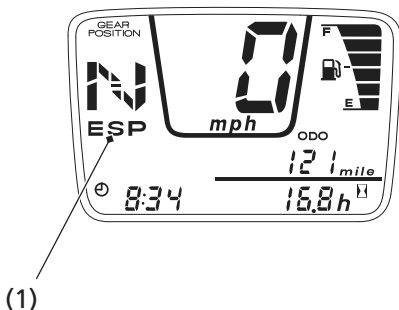

(1) drive mode indicator