


Maintenance Component Locations

rear brake
lever/parking
brake lever

front brake fluid reservoir

front brake lever

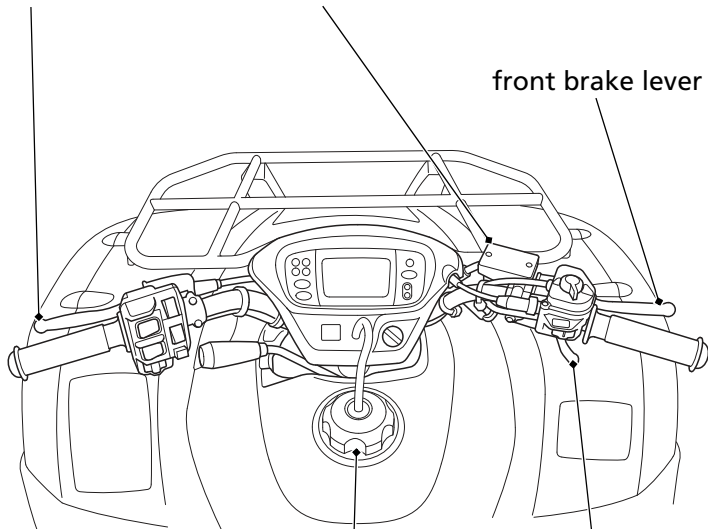

fuel fill cap

throttle lever