
# Vehicle Identification

# **Serial Numbers**

The VIN, engine serial number, and key number may be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (1) is stamped on the front of the frame.


### FRONT

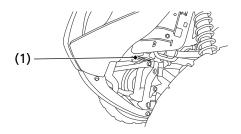

## (1) VIN

The engine number (2) is stamped on the upper side of the rear crankcase.

#### **RIGHT SIDE**

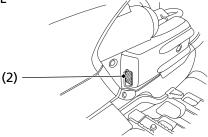

(2) engine number

### 208 Technical Information