

## If a Fuse Blows

---

4. Replace the old fuse.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

<b>NOTICE</b>
---------------

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

5. Reinstall the fuse case cover.

6. Install the seat.