

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
		km	150	1000	2000		
		MONTH	1	6	12		
		NOTE	HOURS	20	100	200	
*	FUEL LINE				I		—
*	THROTTLE OPERATION				I		109
	AIR CLEANER	NOTE 1			C	C	105
	SPARK PLUG				I	I	113
*	VALVE CLEARANCE			I	I	I	116
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			99
**	ENGINE OIL STRAINER SCREEN					C	—
**	ENGINE OIL CENTRIFUGAL FILTER					C	—
*	ENGINE IDLE SPEED			I	I	I	112
*	SECONDARY AIR SUPPLY SYSTEM					I	—

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.