

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL		
			mi	600	1200	
			km	1000	2000	
MONTH	1	6	12			
NOTE	HOURS	20	100	200		
	DRIVE CHAIN	NOTE 1, 2	I, L	[I, L: EVERY 300 mi (500 km) or 50 operating hours]		134
	DRIVE CHAIN SLIDER			I	I	136
*	BRAKE SHOES WEAR	NOTE 1			I	124
	BRAKE SYSTEM		I	I	I	118
	GUARDS			I	I	133
*	CLUTCH SYSTEM		I	I	I	111
*	SUSPENSION			I	I	—
*	SPARK ARRESTER			C	C	117
*	NUTS, BOLTS, FASTENERS		I		I	—
**	WHEELS/TIRES		I	I	I	126
**	TIE-ROD AND JOINT BOOTS		I	I	I	—
**	STEERING SHAFT HOLDER BEARINGS				I	—
**	STEERING SYSTEM				I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.