

# Starting & Stopping the Engine

## Starting Procedure


To restart a warm engine, follow the procedure for “*High Air Temperature.*”

The starter motor will operate only when the transmission is in neutral.

Normal Air Temperature 10° – 35°C (50° – 95°F)


1. Pull the choke lever (1) up all the way to fully ON (A) if the engine is cold.
2. With the throttle 1/8 – 1/4 open, press the start button (2). (If the throttle limiter is adjusted as delivered, open the throttle fully.)

LEFT SIDE

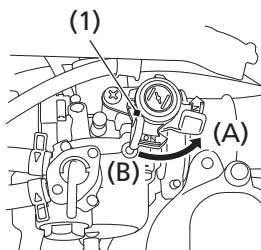

- (1) choke lever  
(A) fully ON  
(B) fully OFF

LEFT HANDLEBAR

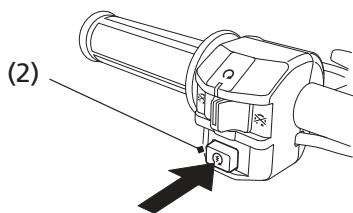

- (2) start button

- Pressing the electric start button for more than 5 seconds at a time may cause the starter to overheat and damage the starter. Release the start button for approximately 10 seconds before pressing it again.

(cont'd)