


# Final Drive Oil

## Changing Oil

Refer to *Safety Precautions* on page 62 .

### LEFT REAR

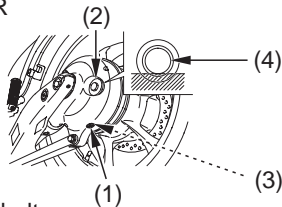

- (1) oil drain bolt
- (2) oil fill cap
- (3) sealing washer
- (4) oil fill inspection hole

Change the oil with the final drive at normal operating temperature to assure complete and rapid draining.

1. Place the motorcycle on its side stand on a firm, level surface.
2. Place a drain pan under the oil drain bolt (1).
3. Remove the oil fill cap (2) and the oil drain bolt.
4. After the oil has completely drained, check that the sealing washer (3) is in good condition. Reinstall the oil drain bolt with its sealing washer (or a new washer, if necessary) and tighten it to the specified torque:  
**9 lbf-ft (12 N·m , 1.2 kgf·m)**
5. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 155 ).

### NOTICE

*Improper disposal of drained fluids is harmful to the environment.*