

## Suspension

---

### *To Reduce Spring Pre-load (LOW):*

For a light load and smooth road conditions, turn the adjuster counterclockwise toward LOW.

### *To Increase Spring Pre-load (HIGH):*

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HIGH.