

Engine Will Not Start


I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence [▶ P. 24](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

I Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is RUN  position [▶ P. 22](#)
- Make sure the side stand is raise.
- Check for a blown fuse [▶ P. 96](#)
- Check for a loose battery connection or battery terminal corrosion [▶ P. 41](#)
- Check the condition of the battery [▶ P. 92](#)

If the problem continues, have your motorcycle inspected by your dealer.