
- **3.** Remove the muffler bracket bolt A, bolt B, nuts and washers.
- 4. Remove the muffler.

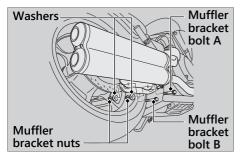

- 5. While holding the outer end of the rear axle shaft with a wrench, remove the rear axle nut and washer.
- 6. Loosen the axle holding bolt.
- Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.

