

Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when the indicator comes on: 0.66 US gal (2.5 L)

≣○ High beam indicator

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the \bigcap (Run) position.

If it comes on while engine is running: P.93

⇒ Right turn signal indicator

Neutral indicator

Comes on when the transmission is in Neutral.

Left turn signal indicator