
 
Switches

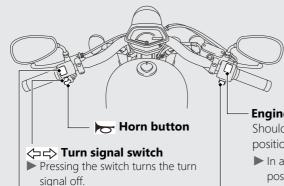



- **Engine stop switch** Should normally remain in the () (Run) position.

► In an emergency, switch to the X (Stop) position (the starter motor will not operate) to stop the engine.

(3) Start button

Headlight turns off when operating the starter motor.

Headlight dimmer switch

- ≣D : High beam
- ≣D : Low beam