
## **Tool Kit**

The tool kit is stored on the face of the ignition switch case behind the ignition switch cover.

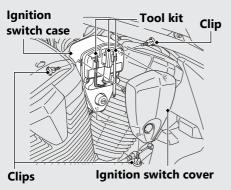

## **Removing the Ignition Switch Cover**

- 1 Remove the clips. →P.60
- 2 Remove the ignition switch cover.

## **Installing the Ignition Switch Cover** Install the parts in the reverse order of removal