

## Maintenance Fundamentals

Check the following items at regular intervals:

- Oil level is between the upper and lower level marks. ➔ P. 69
- Brake fluid level is  
Front: above the LOWER level mark. ➔ P. 78  
Rear: between the UPPER and LOWER level marks. ➔ P. 78
- Engine coolant level is between the UPPER and LOWER level marks. ➔ P. 74
- Side stand functions properly. ➔ P. 81