


## Adjusting the Rear Suspension

### Spring Preload

You can adjust the spring preload by the adjuster knob to suit the load or the road surface.

1. Remove the right side cover. ► P. 64
2. Turn the adjuster knob clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is 6 clicks from the minimum setting (the first click is zero).

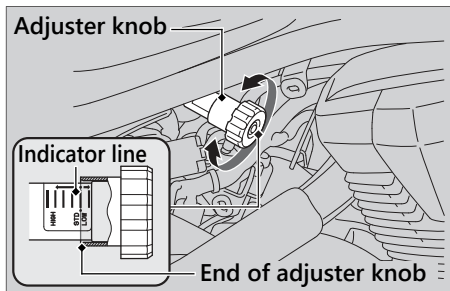

#### NOTICE

Do not turn the adjuster beyond its limits.

#### NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.