


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➤ P. 31
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➤ P. 31
- Make sure engine stop switch is in the  (Run) position. ➤ P. 28
- Check for a blown fuse. ➤ P. 108
- Check for a loose battery connection (➤ P. 59) or battery terminal corrosion (➤ P. 49).
- Check the condition of the battery. ➤ P. 104

If the problem continues, have your motorcycle inspected by your dealer.