

## Tire Puncture ► Removing Wheels

4. Reassemble the brake stopper arm.  
Tighten the stopper arm nut.

**Torque:** 16 lbf·ft (22 N·m, 2.2 kgf·m)

5. Connect the brake rod to the brake arm.
6. Adjust the rear brake pedal freeplay.  
► P. 67
7. Tighten the rear axle nut.

**Torque:** 65 lbf·ft (88 N·m, 9.0 kgf·m)

8. Tighten the axle holding bolt.

**Torque:** 20 lbf·ft (27 N·m, 2.8 kgf·m)

9. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

A used cotter pin may not effectively secure a fastener. Always replace a used cotter pin with a new one.