

Side Cover


(VT750C2/C2F/C2B)

The right side cover must be removed to service the fuses.

The left side cover must be removed to access the compartment box and to check the color label.

(VT750C2S)

The left side cover must be removed to access the storage compartment, to service the fuses, or check the color label.

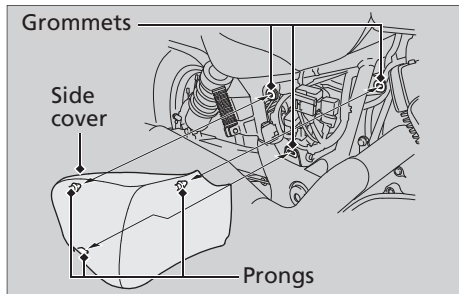

The right and left side covers can be removed in the same way.

Removal

1. Grasp the side cover.
2. Remove the prongs from the grommets.
3. Remove the side cover.

Installation

Install the parts in the reverse order of removal.