


**(VT750C2S only)**

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

**Front Wheel****Removal**

1. Park on a firm, level surface.
2. Remove the front axle bolt.

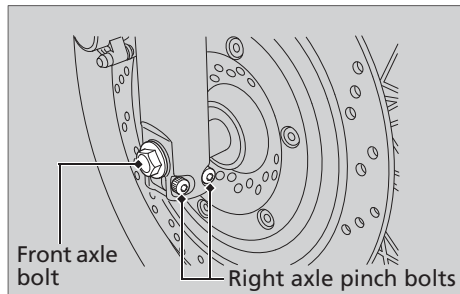

3. Loosen the right and left axle pinch bolts.

4. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.