

## Tire Puncture ► Removing Wheels

5. Remove the front axle shaft, front wheel and side collars.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.**(VT750C2/C2F/C2B)**
  - Do not pull the brake lever while the wheel is off the motorcycle.**(VT750C2S)**
  - Do not pull the brake lever or push the brake pedal while the wheel is off the motorcycle.

