


## ■ Main Fuse & FI Fuse

(VT750C2S)

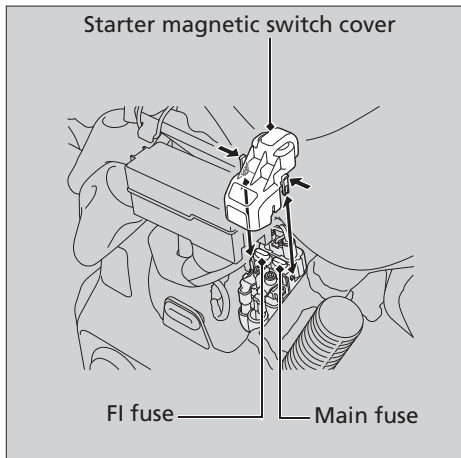

1. Remove the left side cover. ► P. 50
2. Remove the starter magnetic switch cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.  
► Spare fuses are provided in the fuse box. ► P. 99
4. Reinstall parts in the reverse order of removal.