

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 193).

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	36
Starting & Stopping the Engine	37
Preparation.....	37
Starting Procedure	38
Flooded Engine	39
Bank Angle Sensor Ignition Cut-off System	39
How to Stop the Engine	40
Shifting Gears.....	41
Braking	43
Anti-lock Brake System (ABS)	46
ABS Indicator.....	47
Parking.....	48
Theft-prevention Tips	51
Riding with a Passenger or Cargo.....	52