


After adjustment, push the brake arm (6) to confirm that there is a gap between the rear brake adjusting nut (4) and the brake arm pin (5).

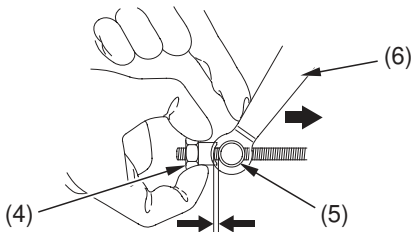

- (4) rear brake adjusting nut
- (5) brake arm pin
- (6) brake arm

After adjustment, confirm the freeplay of the brake pedal.

Other Inspections

- Check that the brake pedal assembly is positioned properly and the securing bolts are tight.
- Make sure the brake rod, brake arm, spring, and fasteners are in good condition.