

# Crankcase Breather

1. Remove the crankcase breather tube and drain deposits.
2. Reinstall the crankcase breather tube.

