



# Indicators


If one of these indicators does not come on when it should, have your dealer check for problems.

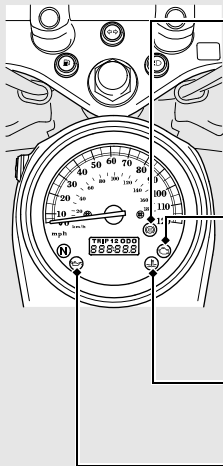


 **ABS (Anti-lock Brake System) indicator**  
**VT750CS**

 
Comes on when the ignition switch is turned on.  
Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➡ P. 80

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.

**If it comes on while engine is running:** ➡ P. 79

 **High coolant temperature indicator**

**If it comes on while riding:** ➡ P. 78

 **Low oil pressure indicator**

Comes on when the ignition switch is turned on.  
Goes off when the engine starts.

**If it comes on while engine is running:** ➡ P. 79