

Troubleshooting

Engine Will Not Start	P. 77
Overheating (High coolant temperature indicator is on)	P. 78
Warning Indicators On or Flashing	P. 79
Low Oil Pressure Indicator	P. 79
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)	P. 79
ABS (Anti-lock Brake System) Indicator	P. 80
Tire Puncture	P. 81

Electrical Trouble	P. 91
Battery Goes Dead	P. 91
Burned-out Light Bulb	P. 91
Blown Fuse	P. 95