

5. Tighten the nut and bolt.

**Rear brake bracket bolt:**

**Torque:** 51 lbf·ft (69 N·m, 7.0 kgf·m).

**Rear axle nut:**

**Torque:** 65 lbf·ft (88 N·m, 9.0 kgf·m).

**Axle holding bolt:**

**Torque:** 20 lbf·ft (27 N·m, 2.8 kgf·m).

6. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

## Muffler Installation

Before installing the muffler, replace the muffler gasket with a new gasket.

1. Tighten the nuts and bolts.

**Exhaust pipe joint nut:**

**Torque:** 18 lbf·ft (25 N·m, 2.5 kgf·m).

**Muffler bracket nut:**

**Torque:** 20 lbf·ft (27 N·m, 2.8 kgf·m).

2. Reinstall the right footpeg.  
Tighten the nut and bolts.

**Footpeg bolt A, B and nut:**

**Torque:** 29 lbf·ft (39 N·m, 4.0 kgf·m).

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.