


■ Main Fuse & FI Fuse

VT750CS

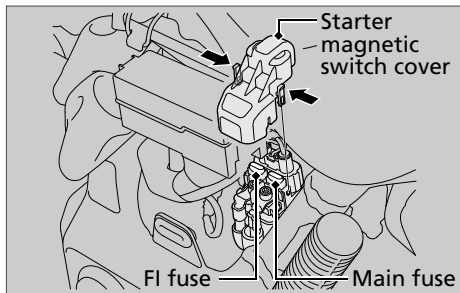

1. Remove the left side cover. ► P. 49
2. Remove the starter magnetic switch cover.
3. Pull the main fuse and FI fuse out one by one and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
► Spare fuses are provided in the fuse box. ► P. 97

4. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.