

Items		Frequency	Odometer Reading*1							Refer to page	
			× 1,000 mi	0.6	4	8	12	16	20		24
			× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0		38.4
Emission-Related Items	Fuel Line	⌘				I		I		I	-
	Throttle Operation	⌘				I		I		I	76
	Air Cleaner*2						R			R	49, 60
	Crankcase Breather*3				C	C	C	C	C	C	77
	Spark Plug				I	R	I	R	I	R	54
	Valve Clearance	⌘		I		I		I		I	-
	Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								58
	Engine Oil Filter			R		R		R		R	58
	Engine Idle Speed	⌘		I	I	I	I	I	I	I	-
	Radiator Coolant*4					I		I		R	61
	Cooling System	⌘				I		I		I	-
	Secondary Air Supply System	⌘				I		I		I	-
Evaporative Emission Control System*5	⌘						I		I	-	

Maintenance Level

- ⌘ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 122).
- ⌘ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R : Replace
- C : Clean