Tire Puncture ► Removing Wheels

Muffler Installation

Before installing the muffler, replace the muffler gasket with a new gasket.

1. Tighten the nuts and bolts.

Exhaust pipe joint nut:

Torque: 18 lbf·ft (25 N·m, 2.5 kgf·m)

Muffler bracket nut:

Torque: 32 lbf·ft (44 N·m, 4.5 kgf·m)

2. Reinstall the right footpeg. Tighten the nut and bolts.

Footpeg bolt A, B and nut:

Torque: 29 lbf·ft (39 N·m, 4.0 kgf·m)

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.