

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or equivalent specified for your scooter.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the air cleaner housing cover by removing the screws.
2. Remove the air cleaner element.
3. Install a new air cleaner element.
 - ▶ Make sure the air cleaner element is installed securely.
4. Install the parts in the reverse order of removal.

