

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlights for proper alignment. Turn the pinion using a Phillips screwdriver in or out as necessary. Obey local laws and regulations.

