


Indicators

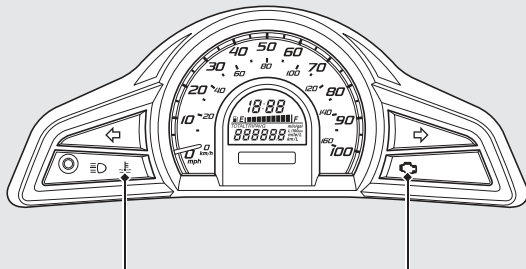


High coolant temperature indicator

If it comes on while riding:

(P82)



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the  (Run) position.

If it comes on while engine is running:

(P83)