


Starting the Engine *(Continued)*

If you cannot start the engine:

- a Place the scooter on its center stand and squeeze the rear brake lever.
- b With the throttle slightly open (about 1/8 in [3 mm], without freeplay), press the start button.

About 1/8 in (3 mm), without freeplay

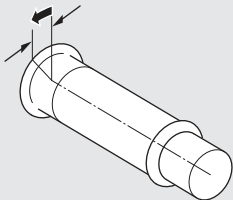

If the engine does not start:

- a Open the throttle fully and press the start button for 5 seconds.
- b Repeat the normal starting procedure.
- c If the engine starts, open the throttle slightly if idling is unstable.
- d If the engine does not start, wait 10 seconds before trying steps a & b again.

■ If Engine Will Not Start (P81)