
## **Storage Equipment** (Continued) **Helmet Holder**

The helmet holder is located under the seat. A helmet set wire is in the tool kit.

u Use the helmet holder only when parked.

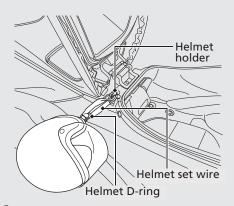

Opening the Seat ( P37

## 3 WARNING

Riding with a helmet attached to the holder can interfere with your ability to safely operate the scooter and could lead to a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.